



GEN2 Torque Converter Lockup Control Kit Installation Instructions

Suitable for:

Toyota Tacoma GRN265

WITH THE FOLLOWING CONFIGURATIONS:
1GR-FE 4.0L V6 Petrol with 5 Speed A750 Automatic

Please read through all of the instructions carefully before proceeding. If any of the information does not appear correct or the diagrams don't match your vehicle, please contact Wholesale Automatic Transmissions or your place of purchase.

This instruction manual will take you through the installation of the:

Torque Converter Lockup Control Kit.

The installation of this kit requires the fitter to have good knowledge of 12 volt wiring, an understanding of wiring schematics and good experience with soldering wires together. If you don't feel comfortable doing any of these tasks, then please contact one of our local Authorized Fitting Agents or your local Auto Electrician to have the unit installed professionally.

IMPORTANT:

- Scotch locks, quick connects or other wire connection devices **MUST NOT BE USED**.
- All wire connections must be soldered and protected with tape or heat shrink.
- Please take care when installing this unit. Incorrect wiring may result in damage to the micro processor controller. Incorrect installation is not covered under warranty.
- The Wiring looms are Vehicle Specific, if there are discrepancies **DO NOT** Install, call your place of purchase for advice.

Parts List

Lockup Module



A750FG Module Loom



Toyota LC100 OEM
Style Switch



In Line Fuse Holder and
5A Fuse



In Line Fuse
Connecting Wire



In Line Fuse Spade
Connector



Installation and Wiring Diagram

Warning: Disconnect all vehicle power sources including batteries, chargers and solar systems before starting the installation process as you will be working with wires that are constantly live.

To install your Lockup Module you will need to locate specific wires then wire in the module according to this instruction.

Using the diagram on the following page as a reference (viewed from the wiring side of the connector) you will need to locate the following pins and wires. The transmission ECU is located behind glove box and is labeled Engine Control.


- PIN A7 — Earth/Ground — White/Black Stripe Wire
- PIN B14 — Solenoid Ground — Light Green Wire
- PIN B15 — Solenoid Positive — Yellow/Black Stripe Wire
- PIN D11 — Reverse Signal — Red/White Stripe Wire
- PIN E9 — Ignition Switched 12V+ — Orange Wire
- PIN E3 — Constant 12V+ — Blue Wire

Proceed to wire in your Lockup Module as per the following notes and wiring diagram. Trouble shooting instructions follow later in the document.

Important Notes:




The main resistor supplied in your kit must be mounted to a metal surface as it can become hot.

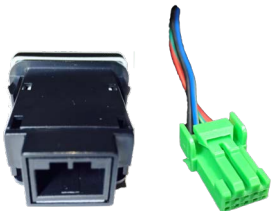

The green connector from the Module Loom must be connected to the OEM Style Switch. Ensure that the grooves on the top of the green connector align with the grooves in the hole on the back of the OEM Style Switch.


If the connector does not slide in easily check the alignment of the grooves.

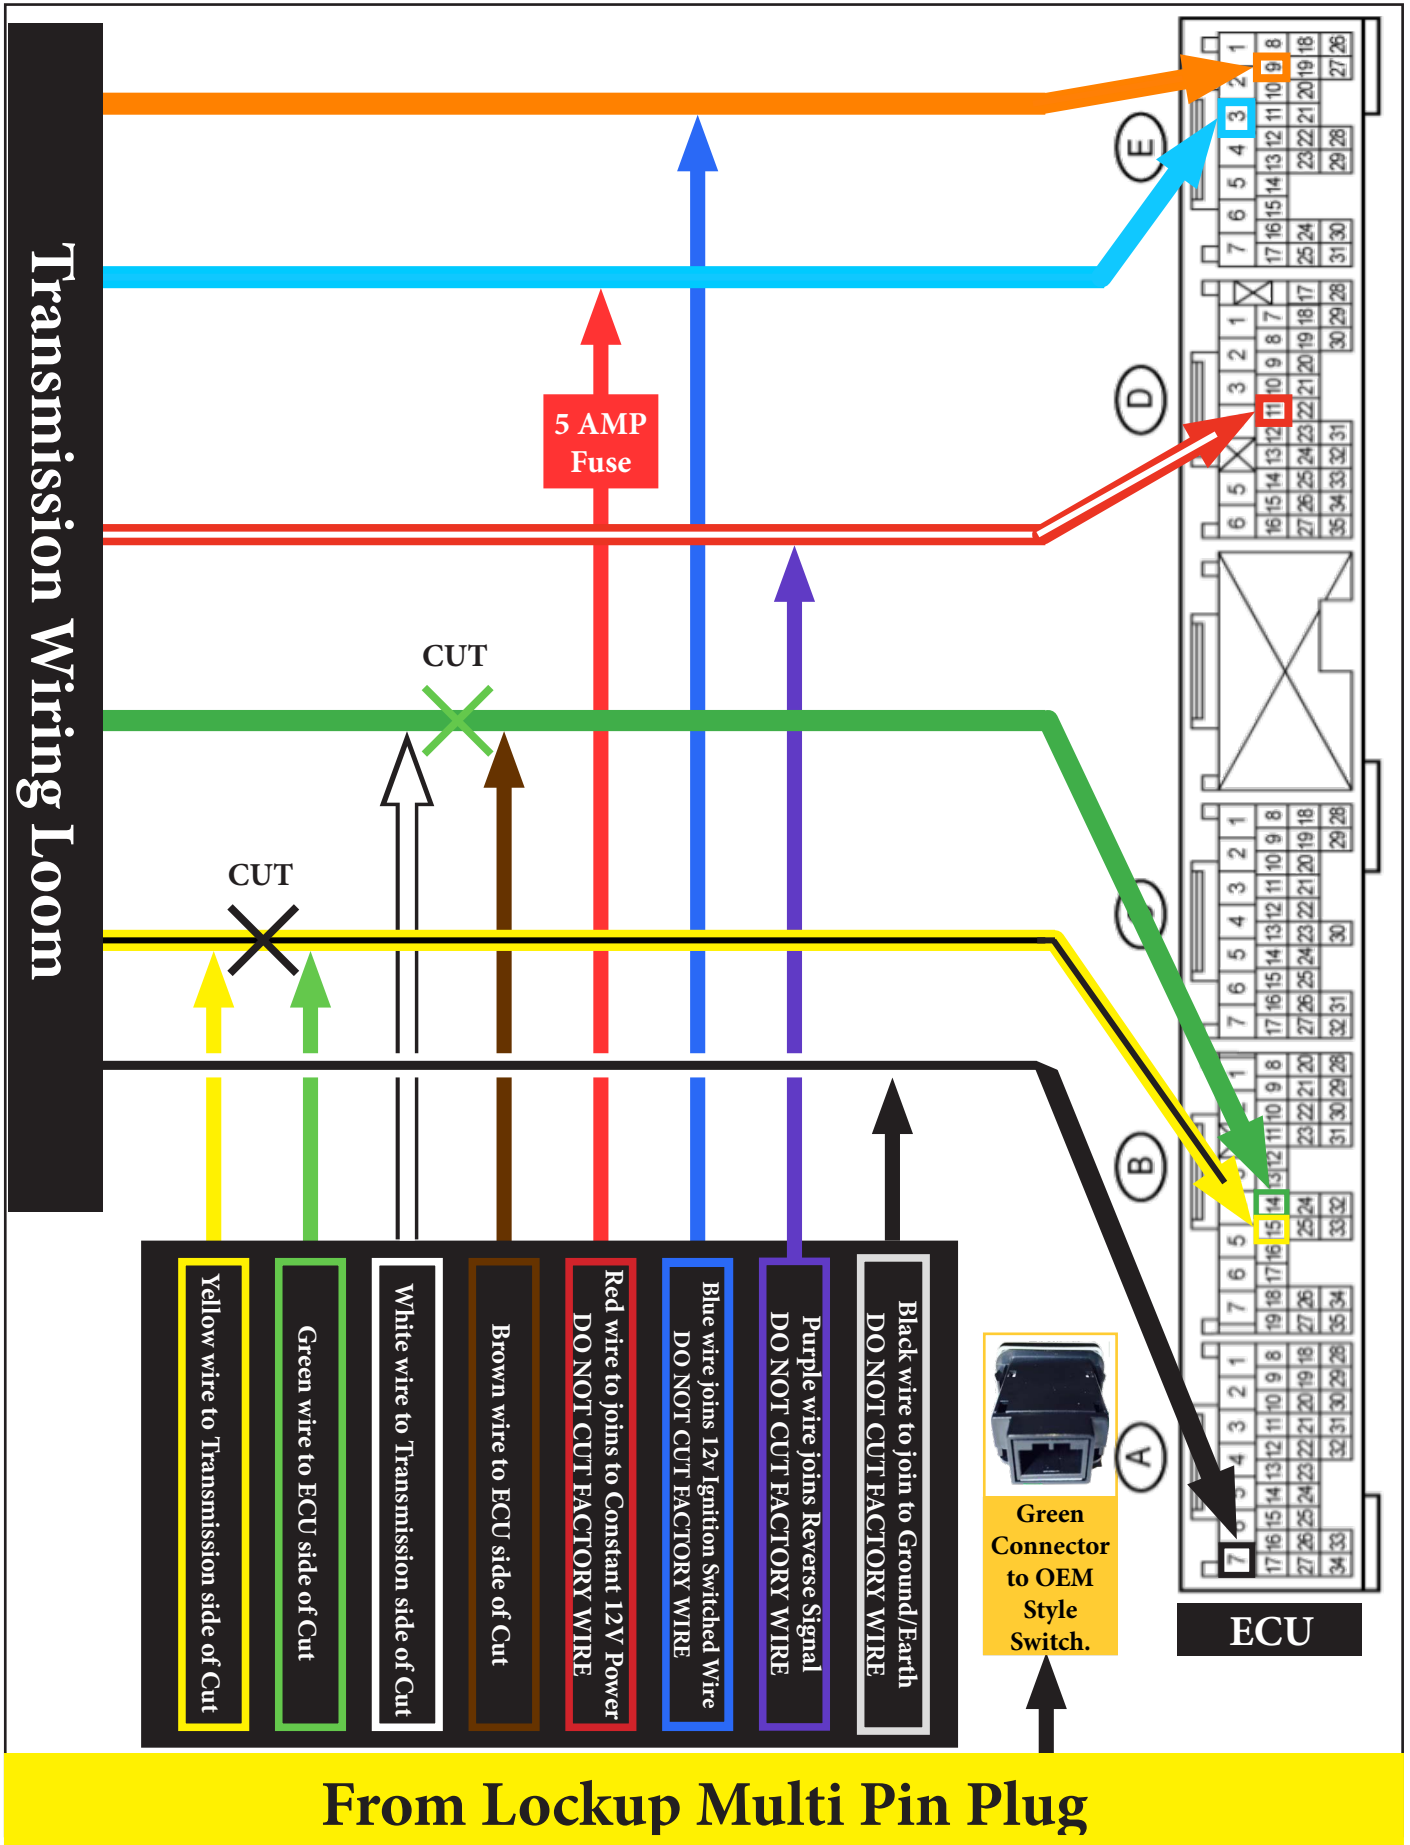

Understanding the Lockup Module Lights Ver 2.8

Follow the directions in the Wiring Diagram to install your Lockup Module. Trouble shooting instructions are provided later in this document for your use if required.

The Lockup Module supplied provides information about the state of the GENII Lockup System.

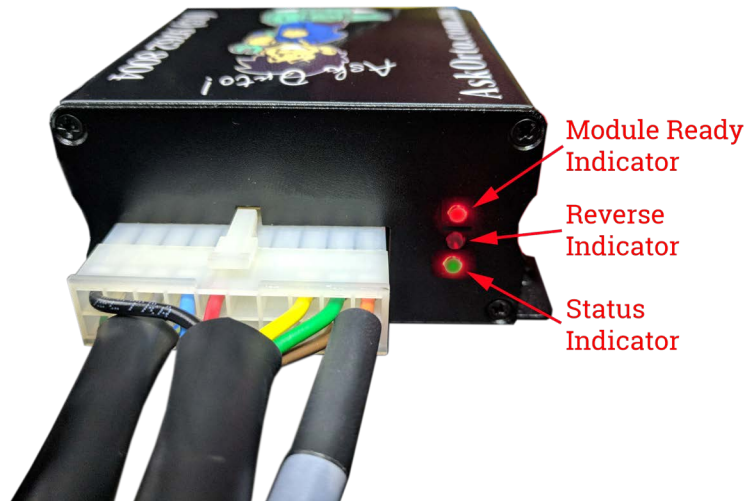

States:

- “Module Ready Indicator” illuminates red to indicate the GENII Lockup System is ready to operate.
- “Reverse Indicator” illuminates orange to indicate reverse (A750 transmissions only).
- “Status Indicator” illuminates green to indicate the GENII Lockup System is engaged.
- Either the “Module Ready Indicator” or “Status Indicator” may flash to provide diagnostic information - see trouble shooting section.

Understanding the Switch Lights

The OEM Style Switch supplied provides information about the state of the Lockup Module.

States:



- “Lock Up” illuminates to indicate the GENII Lockup System is engaged.
- “TCC” (Torque Converter Clutch) illuminates to indicate the GENII Lockup System is ready to operate. “TCC” will flash twice on startup to indicate system checks are complete and no fault has been found.
- When you shift into Reverse, the “TCC” light will start to flash, and will continue to flash for 6 seconds after shifting OUT of Reverse. This is normal behaviour.
- Either “Lock Up” or “TCC” may flash to provide diagnostic information - see trouble shooting section.

Trouble Shooting Guide

Most problems with your Torque Converter Lockup Kit can be resolved using this trouble shooting guide.

Step 1: Check Your Installation

Double check the installation has been completed according to the wiring diagram provided. In particular:

- Check green connector has been plugged into the OEM Style Switch the correct way around.
- Check pins in the connector hole in the back of the OEM Style Switch have not been accidentally bent during installation.
- Check you have wired up the Module Loom as per the wiring diagram in this instruction. Confirm that:
 - All soldering joints look clean and complete.
 - Transmission Wiring Loom wires that must be cut are the correct colors as per the wiring diagram AND that these wires are joined in the ECU in the pin positions indicated. Confirming wires joined in the specified pin location is essential as the Transmission Wiring Loom contains multiple wires that have identical coloring.
 - Module Loom wires that join to cut wires are joined to the correct side of the cut. The wiring diagram shows which join to the Transmission Wiring Loom side of the cut and which join to the ECU side of the cut.
 - Module Loom wires that splice into uncut wires are joined to the correct color wires as per the wiring diagram AND that these wires are joined in the ECU in the pin positions indicated. Confirming wires joined in the specified pin location is essential as the Transmission Wiring Loom contains multiple wires that have identical coloring.

Step 2: Trouble Shoot Using Indicator Lights

The OEM Style Switch and Lockup Module both have lights that indicate their state as described previously. These lights provide valuable diagnostic information that will be used for trouble shooting.

To troubleshoot your vehicle using the indicator lights:

1. Turn your ignition to on.
2. Check the state of the OEM Style Switch and Lockup Module indicator lights.

Apply the steps in the below instructions that match the state of your indicator lights.

Scenario One:

OEM Style Switch:	LOCKUP is OFF TCC is OFF	
Lockup Module:	Module Ready Light is ON Reverse Light is OFF Status Indicator Light is OFF	

Possible Cause	Solution
The green connector that plugs into the OEM Style Switch has been connected upside down.	<ol style="list-style-type: none"> 1. Remove the green connector from the OEM Style Switch. 2. If the pins in the OEM Style Switch are bent straighten them using long nose pliers. 3. Reinstall the green connector into the Switch as per the wiring diagram.
The green connector that plugs into the OEM Style Switch is not fully engaged.	Check green connector is oriented correctly push the connector home
OEM Style Switch or Lockup Module has a fault.	<ol style="list-style-type: none"> 1. Set a multi-meter to DC voltage measurement mode. 2. Check if there is 5 volts or more across the black wire and the blue with yellow stripe wire leading into the green connector. Note: Take care not to short these wires. 3. If more than 5 volts was found it is possible that the LED light in the OEM Style Switch is faulty. Replace switch or contact your place of purchase for further assistance. 4. If under 5 volts was found then contact your place of purchase for further assistance.

Scenario Two:

<p>OEM Style Switch:</p>	<p>LOCKUP is OFF TCC is ON</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is OFF Reverse Light is OFF Status Indicator Light is OFF</p>	

Possible Cause	Solution
<p>Lockup Module has a fault.</p>	<p>Contact your place of purchase for further assistance.</p>


Scenario Three:

<p>OEM Style Switch:</p>	<p>LOCKUP is ON TCC is OFF</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is ON Reverse Light is OFF Status Indicator Light is OFF</p>	



Possible Cause	Solution
<p>Lockup Module has not booted up correctly.</p>	<p>Remove fuse power for 30 seconds and reconnect</p>

Scenario Four:

<p>OEM Style Switch:</p>	<p>LOCKUP is OFF</p> <p>TCC is OFF</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is OFF</p> <p>Reverse Light is OFF</p> <p>Status Indicator Light is OFF</p>	

Possible Cause	Solution
<p>No power getting to the Lockup Module</p>	<ol style="list-style-type: none"> 1. Set a multi-meter to DC voltage mode. 2. Check if there is battery voltage available between the black and red wires on the LC100 Module Loom as per the below picture:  <ol style="list-style-type: none"> 3. If no power is available then check the 5 amp fuse supplied with the Lockup Module. Replace blown fuse if required. 4. If the 5 amp fuse is not blown then check your soldered connections are adequate and match the wiring diagram provided. 5. If all connections are correct check factory fuses in your vehicle have not blown. Replace blown fuses if required.


Scenario Five:

<p>OEM Style Switch:</p>	<p>LOCKUP is OFF TCC is FLASHING</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is FLASHING Reverse Light is OFF Status Indicator Light is OFF</p>	


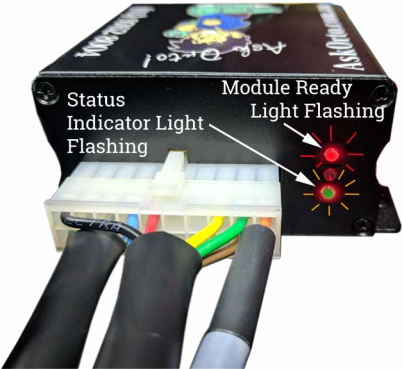
Possible Cause	Solution
<p>Lockup switch was engaged at the time of vehicle ignition.</p>	<p>Disengage lockup switch and wait for TCC light to change from flashing to being constantly on. Lockup Module will now operate correctly.</p>


Scenario Six:

<p>OEM Style Switch:</p>	<p>LOCKUP is ON TCC is OFF</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is ON Reverse Light is OFF Status Indicator Light is FLASHING</p>	

Possible Cause	Solution
<p>The Lockup Module has identified a problem with the "ID Resistor" in the Wiring Loom.</p>	<ol style="list-style-type: none"> Set a multi-meter to resistance measurement mode. Probe the two gray wires in the Module Loom as per the photo below.  <ol style="list-style-type: none"> If the resistance is not 100 ohms then please contact your place of purchase or you may gently pull the two gray wires from the sheathe to reveal the resistor. Remove the factory resistor and replace with 100 ohm resistor.

Scenario Seven:

<p>OEM Style Switch:</p>	<p>LOCKUP is FLASHING</p> <p>TCC is FLASHING</p>	
<p>Lockup Module:</p>	<p>Module Ready Light is FLASHING</p> <p>Reverse Light is OFF</p> <p>Status Indicator Light is FLASHING</p>	

Possible Cause	Solution
<p>Power supply to the Lockup Module has insufficient current.</p>	<ol style="list-style-type: none"> 1. Check the Module Loom is correctly plugged in. 2. If the problem persists, set a multi-meter to DC voltage mode. 3. Check if there is battery voltage available between the black and red wires on the Module Loom as per the below picture: <div data-bbox="817 1236 1270 1644" data-label="Image">  </div> 4. If battery voltage is present contact your place of purchase for assistance. 5. If battery voltage is not present, it is possible a problem fuse is causing insufficient voltage to be present in the active (red) wire. 6. Follow the red wire backwards checking the voltage before and after each fuse. Check relevant vehicle fuses supplying power to the system. 7. Replace any fuses where the voltage before the fuse is battery voltage but the voltage after the fuse is less than battery voltage (or is zero).

Contact Us

We are here to help you get the best from your Lockup Kit. If you have any inquiries or wish to discuss specific circumstances the lock-up kit maybe useful for, please do not hesitate to contact us.

Note

We have provided the following page as a quick reference guide to your Lockup Module.

Wholesale Automatic Transmissions Pty Ltd

Factory 2 / 4 Melrich Road

Bayswater, VIC 3153

info@askorto.com.au

Torque Converter Lockup Kit - Recommended Use

On Road:

- For Towing Only, If you are not towing then you will not need to use the Lockup Kit.
- Perfect for Towing where you cannot maintain enough speed for the factory lock-up to stay engaged or the extra weight has a side effect of blocking the lock-up function completely.
- The Lockup Kit can be used as an aid to improve engine braking down steep descent's while changing down through the gears manually. This can be used when towing also.

Off Road:

- The Lockup Kit can be used to gain 100% engine braking, eliminating all torque convertor runaway for steep downhill descent's in "both" low and high range.
- The Lockup Kit can also be used for beach work where the sand is firm and you are not going fast enough to have reached a speed that the factory lock-up would normally work. This would aid in keeping your transmissions temperature low and also may help with fuel economy.
- Perfect for the never-ending corrugated roads where once again you cannot maintain enough speed for the factory lock-up to be maintained. Using your Lockup Kit under these circumstances will keep your transmission temperature down and aid in improving your fuel economy.

DO NOT's:

- Do not use the Lock-Up Control for crawling over rough terrain
- Do not use the Lock-Up Control for uphill climbs or overtaking
- Do not use the Lock-Up Control with more than 50% throttle
- Do not use the Lock-Up Control on soft sand or mud

The use of the Lock-Up Control under these applications prevents the Torque Converter from doing it's job of multiplying the torque of the engine and from absorbing the shock from the drive train under heavy throttle.


Please remember that if you have the Lock-Up Control engaged and you come to a complete stop, the vehicle could stall just like a Manual Gearbox if you didn't push in the clutch pedal. Always remember to disengage the Lock-Up Control as you are coming to a stop.

Note: The switches displayed in this instruction are for illustrative purposes. The supplied switch may vary depending on your vehicle model.

Understanding the Lockup Module Lights Ver 2.8

Follow the directions in the Wiring Diagram to install your Lockup Module. Trouble shooting instructions are provided later in this document for your use if required.

The Lockup Module supplied provides information about the state of the GENII Lockup System.

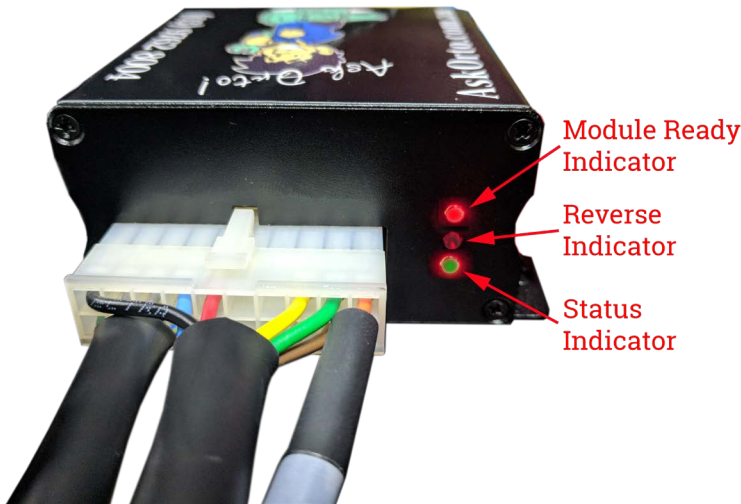

States:

- “Module Ready Indicator” illuminates red to indicate the GENII Lockup System is ready to operate.
- “Reverse Indicator” illuminates orange to indicate reverse (A750 transmissions only).
- “Status Indicator” illuminates green to indicate the GENII Lockup System is engaged.
- Either the “Module Ready Indicator” or “Status Indicator” may flash to provide diagnostic information - see trouble shooting section.

Understanding the Switch Lights

The OEM Style Switch supplied provides information about the state of the Lockup Module.

States:



- “Lock Up” illuminates to indicate the GENII Lockup System is engaged.
- “TCC” (Torque Converter Clutch) illuminates to indicate the GENII Lockup System is ready to operate. “TCC” will flash twice on startup to indicate system checks are complete and no fault has been found.
- When you shift into Reverse, the “TCC” light will start to flash, and will continue to flash for 6 seconds after shifting OUT of Reverse. This is normal behaviour.
- Either “Lock Up” or “TCC” may flash to provide diagnostic information - see trouble shooting section.